Assembling Instruction

(1)Base	(2) Gaster	(3) GasColumn	A	В	C
	X5				7) -2 (7) -3 (7) -2 (7) -3
(4) Armrest	(5)Back	(6)Seat			
X2				(7)-4	
(7)Screws					
			D	E	F
1.	X2				
2.	X4	8X16			
3.	Х3	8X16			
4.	w X2				
5. 💿	Х3	8X20			
6.	X1	3MM	(7)-1		
7.	X1	5MM			
8.	×1	5MM			
9.		5MM 6MM			
			I .		